



HP Stream Notebook PC 13

Maintenance and Service Guide

IMPORTANT! This document is intended for
HP authorized service providers only.

© Copyright 2014 Hewlett-Packard
Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Intel and Core are U.S. registered trademarks of Intel Corporation. Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: November 2014

Document Part Number: 793463-001

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions of Windows 8. This computer may require upgraded and/or separately purchased hardware, drivers, and/or software to take full advantage of Windows 8 functionality. See for <http://www.microsoft.com> details.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a refund subject to the refund policy of your place of purchase.

For any further information or to request a full refund of the computer, please contact your local point of sale (the seller).

Safety warning notice


 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

Table of contents

1 Product description	1
2 External component identification	3
Front	3
Left side	5
Right side	6
Rear	6
Labels	7
3 Illustrated parts catalog	8
Computer major components	8
Display assembly components – non-touchscreen	12
Display assembly components – touchscreen	13
Miscellaneous parts	14
Sequential part number listing	15
4 Removal and replacement procedures preliminary requirements	19
Tools required	19
Service considerations	19
Plastic parts	19
Cables and connectors	19
Grounding guidelines	20
Electrostatic discharge damage	20
Packaging and transporting guidelines	21
Workstation guidelines	21
5 Removal and replacement procedures for Authorized Service Provider parts	23
Component replacement procedures	23
Keyboard/top cover	23
TouchPad	27
Power button board	28
WLAN module	29
WWAN/GPS module	31
Battery	33
USB/card reader board	34
Speakers	35

Heat sink	36
System board	38
Display assembly – non-touchscreen models	40
Display assembly – touchscreen models	46
Power connector cable	50
6 Using Setup Utility (BIOS) and HP PC Hardware Diagnostics (UEFI)	51
Starting Setup Utility (BIOS)	51
Updating the BIOS	51
Determining the BIOS version	51
Downloading a BIOS update	52
Using HP PC Hardware Diagnostics (UEFI)	53
Downloading HP PC Hardware Diagnostics (UEFI) to a USB device	53
7 Specifications	54
Computer specifications	54
33.8-cm (13.3-in), HD display specifications	55
8 Backing up, restoring, and recovering	56
Creating recovery media and backups	56
Creating HP Recovery media	57
Restore and recovery	58
Recovering using HP Recovery Manager	59
What you need to know	59
Using the HP Recovery partition (select models only)	60
Using HP Recovery media to recover	60
Changing the computer boot order	60
Removing the HP Recovery partition (select models only)	61
9 Power cord set requirements	62
Requirements for all countries	62
Requirements for specific countries and regions	62
10 Recycling	64
Index	65


1 Product description

Category	Description	Non-touch	Touch
Product Name	HP Stream Notebook PC 13	✓	✓
Processor	Intel Celeron N2840 (2.16 GHz, turbo up to 2.58 GHz), 1333 MHz/2 MB L2 cache), Dual-Core	✓	✓
Chipset	Intel Bay Trail-M SoC	✓	✓
Graphics	Internal Graphics: Intel HD Graphics Support for DX11, HD decode, and HDMI	✓	✓
Panel	All displays 16:9 ultra-wide aspect ratio	✓	✓
	13.3-in (1368×768), AntiGlare, high-definition (HD), light-emitting diode (LED), low-voltage differential-signalling (LVDS), flat 3.6 mm, 200 nits	✓	✓
	TouchScreen with flush glass, multitouch enabled		✓
	Support LVDS as default, co-layout with eDP1.2	✓	✓
Memory	On-board system memory DDR3L-1333MHz support (DDR3L-1600MHz downgrade to DDR3L-1333MHz)		
	Supports up to 4-GB maximum on-board system memory		✓
	Supports up to 2-GB maximum on-board system memory	✓	
Hard drive	Support for on-board eMMC drives	✓	✓
	64-GB		✓
	32-GB	✓	✓
Optical drive	External, 9.5-mm tray load, SATA, USB, DVD±RW DL SuperMulti Drive	✓	✓
Audio and video	Webcam: HP TrueVision HD, fixed (no tilt), with activity light, 1280×720 by 30 frames per second Dual digital microphones with appropriate echo-cancellation and noise-suppression software DTS Studio Sound Dual speakers	✓	✓
Wireless	Integrated wireless local area network (WLAN) options by way of wireless module Support for the following single antenna (in display assembly) WLAN modules: <ul style="list-style-type: none"> Broadcom BCM43142 802.11 bgn 1x1 Wi-Fi + BT4.0 HMC Combo Adapter Realtek RT8723BE 802.11bgn 1x1 Wi-Fi + BT 4.0 Combo Adapter Support for the following dual antenna (in display assembly) WLAN module: <ul style="list-style-type: none"> Intel Dual Band Wireless-AC 3160 802.11 ac 1×1 Wi-Fi + Bluetooth 4.0 Combo Adapter WWAN 3G module (with two antennas): <ul style="list-style-type: none"> HP hs3110 HSPA+ Mobile Broadband Module 	✓	✓

Category	Description	Non-touch	Touch
	<ul style="list-style-type: none"> HP hs3114 HSPA+ Mobile Broadband Module Compatible with Miracast-certified devices		
External media cards	HP Multifformat Digital Media Card Reader with push-push technology. Support SD/SDHC/SDXC with UHS-1	√	√
Internal expansion	One half-size mini-card for WLAN One M.2 card slot for WWAN	√	√
Ports	AC adapter HP Smart plug (4.5 mm barrel) Audio: one combo audio-out (headphone)/audio-in (microphone) jack, supports jack auto-detection High-definition multimedia interface (HDMI) v.1.4, supporting up to 1080p, 1920×1080 at 60 Hz RJ-45/Ethernet USB 3.0 (1) USB 2.0 (2)	√	√
Keyboard/pointing devices	Full-size, island keyboard Touchpad requirements: <ul style="list-style-type: none"> Clickpad with image sensor Taps enabled as default Multi-touch gestures enabled – ability to turn on and off Support for Microsoft® Windows® 8.1 modern TouchPad gestures Support for PS/2, SMBus Default on for 2-finger scroll and pinch 	√	√
Power requirements	65-W HP Smart adapter (non-PFC, EM, 3-wire, 4.5-mm) and 45-W HP Smart adapter (non-PFC, RC, 3-wire, 4.5-mm) 3-cell, 37-WHr, 3.25-AHr, Li-ion battery	√	√
Security	Kensington Lock slot Support for Trust Platfom Module (TPM) 2.0 (except for the People's Republic of China and Russia)	√	√
Operating system	Microsoft Windows 8.1 with Bing and one year of Office 365 Personal	√	
	Microsoft Windows 8.1 with Bing	√	
	Microsoft Windows 8.1 with one year of Office 365 Personal	√	√
	Microsoft Windows 8.1	√	√
Serviceability	End user replaceable parts: AC adapter SIM card	√	√

2 External component identification

Front

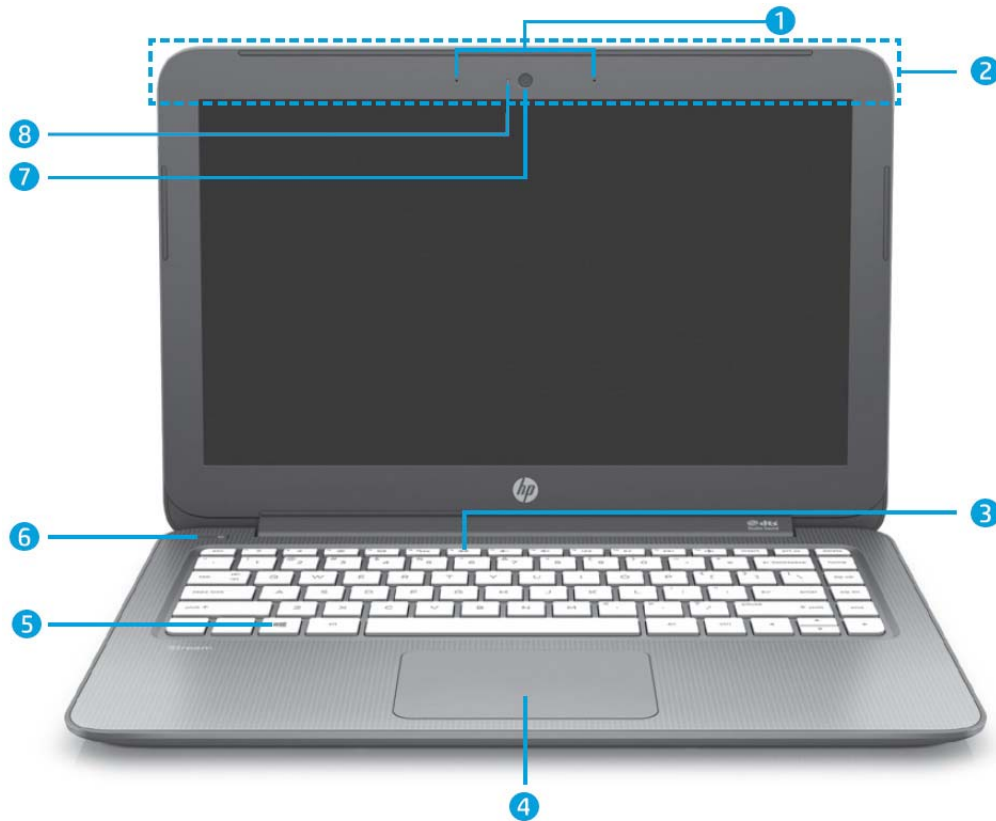

Item	Component	Description
(1)	Internal microphones (2)	Record sound.
(2)	WLAN antennas (2)*	Send and receive wireless signals to communicate with WLANs.
(3)	Mute light	<ul style="list-style-type: none">Amber: Computer sound is off.Off: Computer sound is on.
(4)	TouchPad zone	Reads your finger gestures to move the pointer or activate items on the screen. NOTE: The TouchPad also supports edge-swipe gestures.
(5)	Windows key	Returns you to the Start screen from an open app or the Windows desktop. NOTE: Pressing the Windows key again will return you to the previous screen.
(6)	Power button	<ul style="list-style-type: none">When the computer is off, press the button to turn on the computer.

Item	Component	Description
		<ul style="list-style-type: none"> When the computer is on, press the button briefly to initiate Sleep. When the computer is in the Sleep state, press the button briefly to exit Sleep. When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>CAUTION: Pressing and holding down the power button will result in the loss of unsaved information.</p> <p>If the computer has stopped responding and Windows shutdown procedures are ineffective, press and hold the power button down for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, see your power options. From the Start screen, type <code>power</code>, select Power and sleep settings, and then select Power and sleep from the list of applications.</p>
(7)	Webcam light	On: The webcam is in use.
(8)	Webcam	Records video and captures photographs. Some models allow you to video conference and chat online using streaming video. To use the webcam, from the Start screen, type <code>camera</code> , and then select Camera from the list of applications.
<p>*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. For wireless regulatory notices, see the section of the <i>Regulatory, Safety, and Environmental Notices</i> that applies to your country or region. To access this guide, from the Start screen, type <code>support</code>, and then select the HP Support Assistant app.</p>		

Left side



Item	Component	Description
(9)	Security cable slot	<p>Attaches an optional security cable to the computer.</p> <p>The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.</p>
(10)	HDMI port	<p>Connects an optional video or audio device, such as a highdefinition television, any compatible digital or audio component, or a high-speed HDMI device.</p>
(11)	USB 3.0 port	<p>Connects an optional USB device, such as a keyboard, mouse, external drive, printer, scanner or USB hub.</p>
(12)	Audio-out (headphone)/Audio-in (microphone) jack	<p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional microphone-only devices.</p> <p>WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i>. To access this guide, from the Start screen, type support, and then select the HP Support Assistant app.</p> <p>NOTE: When a device is connected to the jack, the computer speakers are disabled.</p> <p>NOTE: Be sure that the device cable has a 4-conductor connector that supports both audio-out (headphone) and audio-in (microphone).</p>
(13)	Memory card reader	<p>Reads optional memory cards that store, manage, share, or access information.</p> <p>To insert a card: Hold the card label-side up, with connectors facing the slot, insert the card into the slot, and then push in on the card until it is firmly seated.</p> <p>To remove a card:</p> <p>Press in on the card it until it pops out.</p>
(14)	Power light	<ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state, a power saving state. The computer shuts off power to the display and other unneeded components. Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.

Right side



Item	Component	Description
(15)	SIM slot	Supports a wireless subscriber identity module (SIM).
(16)	USB 2.0 ports (2)	Each USB 3.0 port connects an optional USB device, such as a keyboard, mouse, external drive, printer, scanner or USB hub.
(17)	AC adapter light	<ul style="list-style-type: none">On: The AC adapter is connected and the battery is charged.Off: The computer is using battery power.
(18)	Power connector	Connects an AC adapter.


Rear



Item	Component	Description
(19)	Speakers (2)	Produce sound.

Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

 **IMPORTANT:** All labels described in this section will be located in one of 3 places depending on your computer model: affixed to the bottom of the computer, located in the battery bay, or under the service door.

 **TIP:** You can also press **fn+esc** for system information.


- Service label—Provides important information to identify your computer. When contacting support, you will probably be asked for the serial number, and possibly for the product number or the model number. Locate these numbers before you contact support.

Your service label will resemble one of the examples shown below. Refer to the illustration that most closely matches the service label on your computer.



Component	
(1)	Serial number
(2)	Product number
(3)	Warranty period
(4)	Model number (select models only)

- Microsoft® Certificate of Authenticity label (select models only prior to Windows 8)—Contains the Windows Product Key. You may need the Product Key to update or troubleshoot the operating system. HP platforms preinstalled with Windows 8 or Windows 8.1 do not have the physical label, but have a Digital Product Key electronically installed.

 **NOTE:** This Digital Product Key is automatically recognized and activated by Microsoft Operating Systems on a reinstall of the Windows 8 or Windows 8.1 operating system with HP-approved recovery methods.


- Regulatory label(s)—Provide(s) regulatory information about the computer.
- Wireless certification label(s)—Provide(s) information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

3 Illustrated parts catalog



NOTE: HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Computer major components

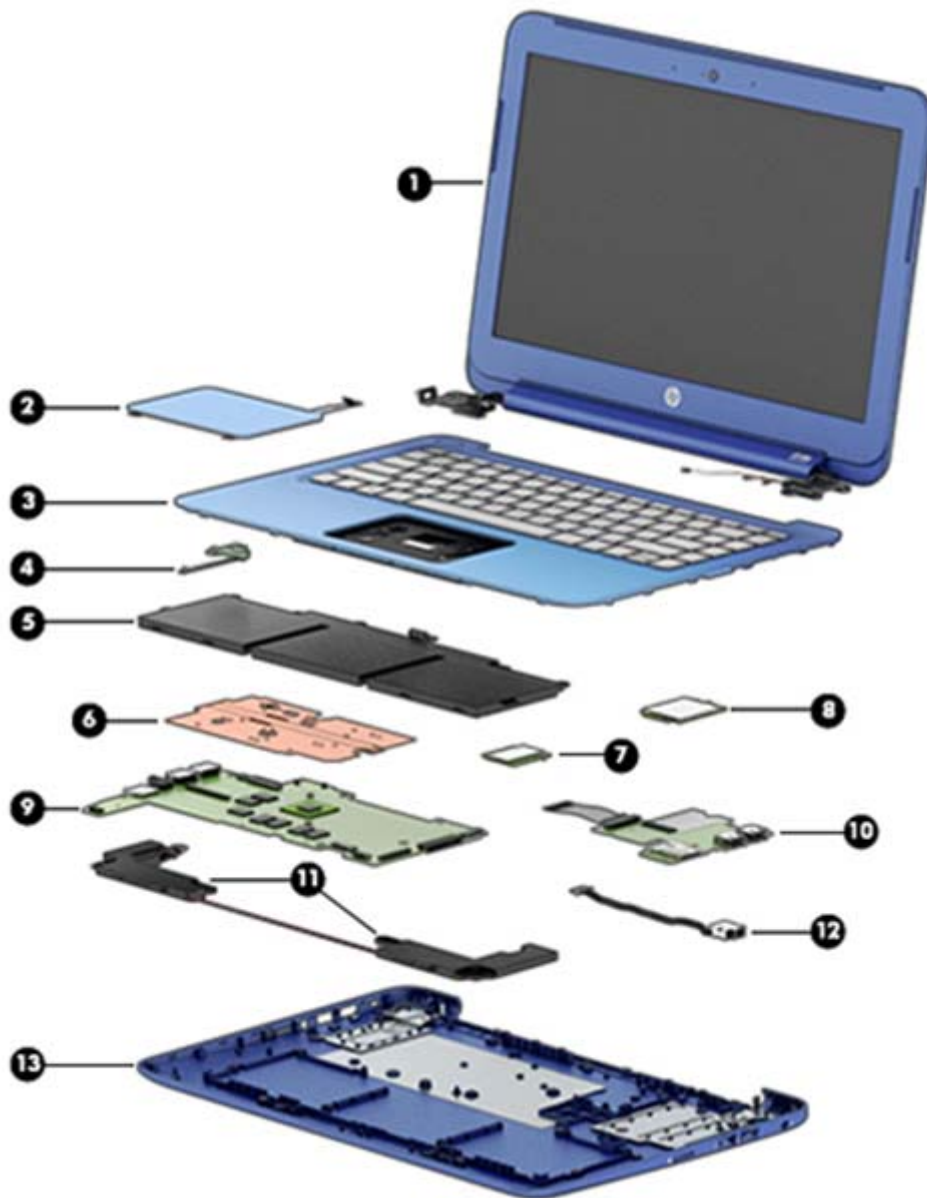


Item	Component	Spare part number
(1)	Display assembly: The display assembly is spared at the subcomponent level only. For more display assembly spare part information, see Display assembly components – non-touchscreen on page 12 .	
(2)	TouchPad (includes cable)	
	For use in models without WWAN	795911-001
	For use in models with WWAN	792776-001
(3)	Keyboard/top cover (includes keyboard cable):	
	Magenta models:	
	For use in Belgium	792792-A41
	For use in Bulgaria	792792-261
	For use in Canada	792792-DB1
	For use in the Czech Republic and Slovakia	792792-FL1
	For use in Denmark, Finland, and Norway	792792-DH1
	For use in France	792792-051
	For use in Germany	792792-041
	For use in Greece	792792-151
	For use in Hungary	792792-211
	For use in Israel	792792-BB1
	For use in Italy	792792-061
	For use in Japan	792792-291
	For use in Latin America	792792-161
	For use in the Netherlands	792792-B31
	For use in Portugal	792792-131
	For use in Romania	792792-271
	For use in Russia	792792-251
	For use in Saudi Arabia	792792-171
	For use in Slovenia	792792-BA1
	For use in South Korea	792792-AD1
	For use in Spain	792792-071
	For use in Switzerland	792792-BG1
	For use in Taiwan	792792-AB1
	For use in Thailand	792792-281
	For use in Turkey	792792-141
	For use in the United Kingdom and Singapore	792792-031
	For use in the United States	792792-001

Item	Component	Spare part number
	Blue models:	
	For use in Belgium	792791-A41
	For use in Bulgaria	792791-261
	For use in Canada	792791-DB1
	For use in the Czech Republic and Slovakia	792791-FL1
	For use in Denmark, Finland, and Norway	792791-DH1
	For use in France	792791-051
	For use in Germany	792791-041
	For use in Greece	792791-151
	For use in Hungary	792791-211
	For use in Israel	792791-BB1
	For use in Italy	792791-061
	For use in Japan	792791-291
	For use in Latin America	792791-161
	For use in the Netherlands	792791-B31
	For use in Portugal	792791-131
	For use in Romania	792791-271
	For use in Russia	792791-251
	For use in Saudi Arabia	792791-171
	For use in Slovenia	792791-BA1
	For use in South Korea	792791-AD1
	For use in Spain	792791-071
	For use in Switzerland	792791-BG1
	For use in Taiwan	792791-AB1
	For use in Thailand	792791-281
	For use in Turkey	792791-141
	For use in the United Kingdom and Singapore	792791-031
	For use in the United States	792791-001
(4)	Power button board (includes cable)	792777-001
(5)	Battery , 3-cell, 37-WHr, 3.25-AHr, Li-ion (includes cable)	787521-005
(6)	Heat sink (includes thermal cloth)	792773-001
(7)	WLAN module:	
	Broadcom BCM43142 802.11 bgn 1x1 Wi-Fi + BT4.0 HMC Combo Adapter	753077-005
	Intel Dual Band Wireless-AC 3160 802.11 ac 1×1 Wi-Fi + Bluetooth 4.0 Combo Adapter	784638-005

Item	Component	Spare part number
(8)	WWAN/GPS module:	
	HP hs3110 HSPA+ Mobile Broadband Module	748599-005
	HP hs3114 HSPA+ Mobile Broadband Module	748600-005
(9)	System board (includes a graphics subsystem with UMA memory, thermal grease, and thermal pads):	
	Equipped with an Intel Celeron N2840 processor with 2 GB system memory, 64 GB eMMC hard drive, and the Windows 8 Standard operating system	792786-501
	Equipped with an Intel Celeron N2840 processor with 2 GB system memory, 64 GB eMMC hard drive, and a non-Windows 8 operating system	792786-001
	Equipped with an Intel Celeron N2840 processor with 2 GB system memory, 32 GB eMMC hard drive, and the Windows 8 Standard operating system	792785-501
	Equipped with an Intel Celeron N2840 processor with 2 GB system memory, 32 GB eMMC hard drive, and a non-Windows 8 operating system	792785-001
(10)	USB/card reader board (includes cable)	
	For use in models without WWAN	792778-001
	For use in models with WWAN	792769-001
(11)	Speakers (include left and right speakers and cables)	792784-001
(12)	Power connector cable (includes tape)	796086-001
(13)	Base enclosure	
	For use in blue non-touchscreen models without WWAN	792763-001
	For use in blue non-touchscreen models with WWAN	792764-001
	For use in magenta models without WWAN	792765-001
	For use in magenta models with WWAN	792766-001
	For use in blue touchscreen models without WWAN	798213-001
	For use in blue touchscreen models with WWAN	798214-001
	Rubber Kit (not illustrated; includes bottom screw covers and computer feet)	792782-001


Display assembly components – non-touchscreen

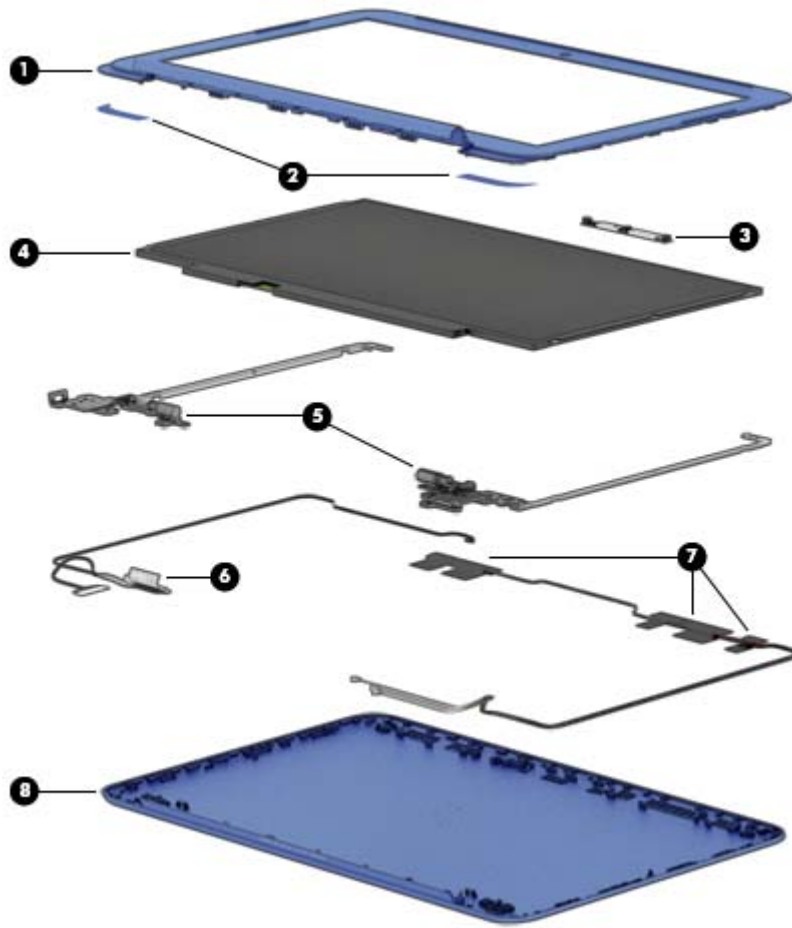

Item	Description	Spare part number
(1)	Display bezel (includes Mylar screw covers)	
	For use in magenta models	792768-001
	For use in blue models	792767-001
(2)	Display bezel screw covers: The display bezel screw covers are included in all display spare part kits.	
(3)	Webcam/microphone module (includes Mylar screw covers)	793616-001
(4)	Raw display panel (includes Mylar screw covers)	792779-001
(5)	Display Hinge Kit (includes left and right display hinges and Mylar screw covers)	792774-001
(6)	Display panel cable (includes Mylar screw covers)	
	For use in models without a touchscreen and without WWAN	792771-001
	For use in models without a touchscreen and with WWAN	798215-001
(7)	Antenna Kit (includes wireless antenna cable, transceiver, Mylar screw covers, and screws)	
	WLAN	792758-001
	WWAN	792757-001

Item	Description	Spare part number
(8)	Display back cover (includes screws)	
	For use in magenta models without a touchscreen	792760-001
	For use in blue models without a touchscreen	792761-001

Display assembly components – touchscreen

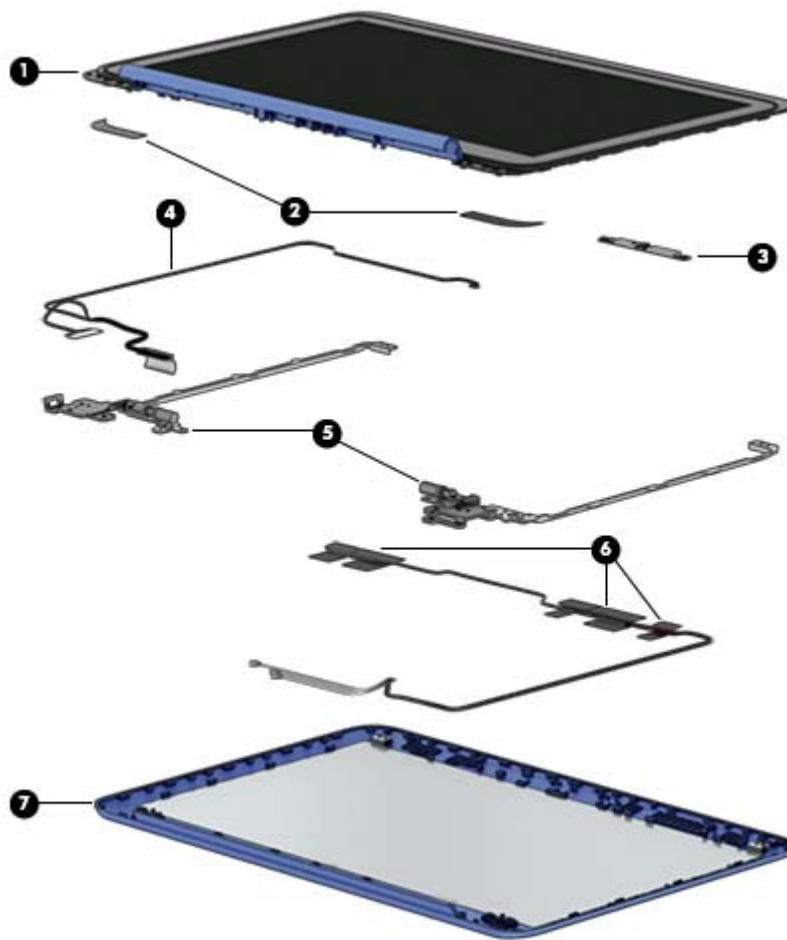

Item	Description	Spare part number
(1)	Display panel assembly , includes bezel and Mylar screw covers	792780-001
(2)	Display bezel screw covers: The display bezel screw covers are included in all display spare part kits.	
(3)	Webcam/microphone module (includes Mylar screw covers)	792793-001
(4)	Display panel cable (includes Mylar screw covers)	
	For use in touchscreen models without WWAN	792772-001
	For use in touchscreen models with WWAN	798216-001
(5)	Display Hinge Kit (includes left and right display hinges)	792775-001

Item	Description	Spare part number
(6)	Antenna Kit (includes wireless antenna cable, transceiver, Mylar screw covers, and screws)	
	WLAN	792758-001
	WWAN	792757-001
(7)	Display back cover (includes Mylar screw covers and screws)	792759-001

Miscellaneous parts

Component	Spare part number
AC adapter:	
65-W HP Smart adapter (non-PFC, EM, 3-wire, 4.5-mm)	714657-001
45-W HP Smart adapter (non-PFC, RC, 3-wire, 4.5-mm)	741727-001
HP HDMI-to-VGA adapter	701943-001
RJ-45/USB adapter dongle	539614-001
HP USB external DVD±RW DL SuperMulti Drive	747080-001
Power cord (3-pin, black, 1.00-m):	
For use in Australia	755530-011
For use in Denmark	755530-081
For use in Europe	755530-021
For use in India	755530-D61
For use in Israel	755530-BB1
For use in Japan	755530-291
For use in North America	755530-001
For use in the People's Republic of China	755530-AA1
For use in South Africa	755530-AR1
For use in South Korea	755530-AD1
For use in Switzerland	755530-111
For use in Taiwan	755530-AB1
For use in Thailand	755530-201
For use in the United Kingdom and Singapore	755530-031
Rubber Feet Kit (includes bottom cover screw covers and computer feet)	792782-001
Screw Kit	792783-001

Sequential part number listing

Spare part number	Description
539614-001	RJ-45/USB adapter dongle
701943-001	HP HDMI-to-VGA adapter
714657-001	65-W HP Smart adapter (non-PFC, EM, 3-wire, 4.5-mm)
741727-001	45-W HP Smart adapter (non-PFC, RC, 3-wire, 4.5-mm)
747080-001	HP USB external DVD±RW DL SuperMulti Drive
748599-005	HP hs3110 HSPA+ Mobile Broadband Module
748600-005	HP hs3114 HSPA+ Mobile Broadband Module
753077-005	Broadcom BCM43142 802.11 bgn 1x1 Wi-Fi + BT4.0 HMC Combo Adapter
755530-001	Power cord for use in North America (3-pin, black, 1.00-m)
755530-011	Power cord for use in Australia (3-pin, black, 1.00-m)
755530-021	Power cord for use in Europe (3-pin, black, 1.00-m)
755530-031	Power cord for use in the United Kingdom and Singapore (3-pin, black, 1.00-m)
755530-081	Power cord for use in Denmark (3-pin, black, 1.00-m)
755530-111	Power cord for use in Switzerland (3-pin, black, 1.00-m)
755530-201	Power cord for use in Thailand (3-pin, black, 1.00-m)
755530-291	Power cord for use in Japan (3-pin, black, 1.00-m)
755530-AA1	Power cord for use in the People's Republic of China (3-pin, black, 1.00-m)
755530-AB1	Power cord for use in Taiwan (3-pin, black, 1.00-m)
755530-AD1	Power cord for use in South Korea (3-pin, black, 1.00-m)
755530-AR1	Power cord for use in South Africa (3-pin, black, 1.00-m)
755530-BB1	Power cord for use in Israel (3-pin, black, 1.00-m)
755530-D61	Power cord for use in India (3-pin, black, 1.00-m)
784638-005	Intel Dual Band Wireless-AC 3160 802.11 ac 1×1 WiFi + Bluetooth 4.0 Combo Adapter
787521-005	3-cell, 37-WHr, 3.25-AHr, Li-ion battery (includes cable)
792757-001	WWAN antenna Kit (includes wireless antenna cable, transceiver, Mylar screw covers, and screws)
792758-001	WLAN antenna Kit (includes wireless antenna cable, transceiver, Mylar screw covers, and screws)
792759-001	Display back cover for use in blue models with a touchscreen (includes Mylar screw covers and screws)
792760-001	Display back cover for use in magenta models without a touchscreen (includes Mylar screw covers and screws)
792761-001	Display back cover for use in blue models without a touchscreen (includes Mylar screw covers and screws)
792763-001	Base enclosure for use in blue non-touchscreen models without WWAN
792764-001	Base enclosure for use in blue non-touchscreen models with WWAN

Spare part number	Description
792765-001	Base enclosure for use in magenta models without WWAN
792766-001	Base enclosure for use in magenta models with WWAN
792767-001	Display bezel for use in blue models (includes screws)
792768-001	Display bezel for use in magenta models (includes screws)
792769-001	USB/card reader board for use in models with WWAN (includes cable)
792771-001	Display panel cable for use in models without a touchscreen and without WWAN (includes Mylar screw covers)
792772-001	Display panel cable for use in models with a touchscreen and without WWAN (includes Mylar screw covers)
792773-001	Heat sink (includes thermal cloth)
792774-001	Display Hinge Kit for use in models without a touchscreen (includes left and right display hinges and Mylar screw covers)
792775-001	Display Hinge Kit for use in models with a touchscreen (includes left and right display hinges and Mylar screw covers)
792776-001	TouchPad for use in models with WWAN (includes cable)
792777-001	Power button board (includes cable)
792778-001	USB/card reader board for use in models without WWAN (includes cable)
792779-001	Raw display panel (13.3-in) for use in non-touchscreen models (includes Mylar screw covers)
792780-001	Raw display panel (13.3-in) for use in touchscreen models (includes bezel and Mylar screw covers)
792782-001	Rubber Kit (includes bottom cover screw covers and computer feet)
792783-001	Screw Kit
792784-001	Speakers (include left and right speakers and cables)
792785-001	System board equipped with an Intel Celeron N2840 processor with 2 GB system memory, 32 GB eMMC hard drive, and the Windows 8 Standard operating system (includes thermal grease and thermal pads)
792785-501	System board equipped with an Intel Celeron N2840 processor with 2 GB system memory, 32 GB eMMC hard drive, and a non-Windows 8 operating system (includes thermal grease and thermal pads)
792786-001	System board equipped with an Intel Celeron N2840 processor with 2 GB system memory, 64 GB eMMC hard drive, and the Windows 8 Standard operating system (includes thermal grease and thermal pads)
792786-501	System board equipped with an Intel Celeron N2840 processor with 2 GB system memory, 64 GB eMMC hard drive, and a non-Windows 8 operating system (includes thermal grease and thermal pads)
792791-001	Keyboard/top cover for use in blue models in the United States (includes keyboard cable)
792791-031	Keyboard/top cover for use in blue models in the United Kingdom and Singapore (includes keyboard cable)
792791-041	Keyboard/top cover for use in blue models in Germany (includes keyboard cable)
792791-051	Keyboard/top cover for use in blue models in France (includes keyboard cable)
792791-061	Keyboard/top cover for use in blue models in Italy (includes keyboard cable)

Spare part number	Description
792791-071	Keyboard/top cover for use in blue models in Spain (includes keyboard cable)
792791-131	Keyboard/top cover for use in blue models in Portugal (includes keyboard cable)
792791-141	Keyboard/top cover for use in blue models in Turkey (includes keyboard cable)
792791-151	Keyboard/top cover for use in blue models in Greece (includes keyboard cable)
792791-161	Keyboard/top cover for use in blue models in Latin America (includes keyboard cable)
792791-171	Keyboard/top cover for use in blue models in Saudi Arabia (includes keyboard cable)
792791-211	Keyboard/top cover for use in blue models in Hungary (includes keyboard cable)
792791-251	Keyboard/top cover for use in blue models in Russia (includes keyboard cable)
792791-261	Keyboard/top cover for use in blue models in Bulgaria (includes keyboard cable)
792791-271	Keyboard/top cover for use in blue models in Romania (includes keyboard cable)
792791-281	Keyboard/top cover for use in blue models in Thailand (includes keyboard cable)
792791-291	Keyboard/top cover for use in blue models in Japan (includes keyboard cable)
792791-A41	Keyboard/top cover for use in blue models in Belgium (includes keyboard cable)
792791-AB1	Keyboard/top cover for use in blue models in Taiwan (includes keyboard cable)
792791-AD1	Keyboard/top cover for use in blue models in South Korea (includes keyboard cable)
792791-B31	Keyboard/top cover for use in blue models internationally (includes keyboard cable)
792791-BA1	Keyboard/top cover for use in blue models in Slovenia (includes keyboard cable)
792791-BB1	Keyboard/top cover for use in blue models in Israel (includes keyboard cable)
792791-BG1	Keyboard/top cover for use in blue models in Switzerland (includes keyboard cable)
792791-DB1	Keyboard/top cover for use in blue models in Canada (includes keyboard cable)
792791-DH1	Keyboard/top cover for use in blue models in Denmark, Finland, and Norway (includes keyboard cable)
792791-FL1	Keyboard/top cover for use in blue models in the Czech Republic and Slovakia (includes keyboard cable)
792792-001	Keyboard/top cover for use in magenta models in the United States (includes keyboard cable)
792792-031	Keyboard/top cover for use in magenta models in the United Kingdom and Singapore (includes keyboard cable)
792792-041	Keyboard/top cover for use in magenta models in Germany (includes keyboard cable)
792792-051	Keyboard/top cover for use in magenta models in France (includes keyboard cable)
792792-061	Keyboard/top cover for use in magenta models in Italy (includes keyboard cable)
792792-071	Keyboard/top cover for use in magenta models in Spain (includes keyboard cable)
792792-131	Keyboard/top cover for use in magenta models in Portugal (includes keyboard cable)
792792-141	Keyboard/top cover for use in magenta models in Turkey (includes keyboard cable)
792792-151	Keyboard/top cover for use in magenta models in Greece (includes keyboard cable)
792792-161	Keyboard/top cover for use in magenta models in Latin America (includes keyboard cable)

Spare part number	Description
792792-171	Keyboard/top cover for use in magenta models in Saudi Arabia (includes keyboard cable)
792792-211	Keyboard/top cover for use in magenta models in Hungary (includes keyboard cable)
792792-251	Keyboard/top cover for use in magenta models in Russia (includes keyboard cable)
792792-261	Keyboard/top cover for use in magenta models in Bulgaria (includes keyboard cable)
792792-271	Keyboard/top cover for use in magenta models in Romania (includes keyboard cable)
792792-281	Keyboard/top cover for use in magenta models in Thailand (includes keyboard cable)
792792-291	Keyboard/top cover for use in magenta models in Japan (includes keyboard cable)
792792-A41	Keyboard/top cover for use in magenta models in Belgium (includes keyboard cable)
792792-AB1	Keyboard/top cover for use in magenta models in Taiwan (includes keyboard cable)
792792-AD1	Keyboard/top cover for use in magenta models in South Korea (includes keyboard cable)
792792-B31	Keyboard/top cover for use in magenta models internationally (includes keyboard cable)
792792-BA1	Keyboard/top cover for use in magenta models in Slovenia (includes keyboard cable)
792792-BB1	Keyboard/top cover for use in magenta models in Israel (includes keyboard cable)
792792-BG1	Keyboard/top cover for use in magenta models in Switzerland (includes keyboard cable)
792792-DB1	Keyboard/top cover for use in magenta models in Canada (includes keyboard cable)
792792-DH1	Keyboard/top cover for use in magenta models in Denmark, Finland, and Norway (includes keyboard cable)
792792-FL1	Keyboard/top cover for use in magenta models in the Czech Republic and Slovakia (includes keyboard cable)
792793-001	Webcam/microphone module for use in models with a touchscreen (includes Mylar screw covers)
793616-001	Webcam/microphone module for use in models without a touchscreen (includes Mylar screw covers)
795911-001	TouchPad for use in models without WWAN (includes cable)
796086-001	Power connector cable (includes tape)
798213-001	Base enclosure for use in blue touchscreen models without WWAN
798214-001	Base enclosure for use in blue touchscreen models with WWAN
798215-001	Display panel cable for use in models without a touchscreen and with WWAN (includes Mylar screw covers)
798216-001	Display panel cable for use in models with a touchscreen and with WWAN (includes Mylar screw covers)

4 Removal and replacement procedures preliminary requirements

Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screw driver
- Magnetic screw driver
- Phillips P0 screw driver

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



NOTE: As you remove each subassembly from the tablet, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts



CAUTION: Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

Cables and connectors



CAUTION: When servicing the tablet, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the tablet.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Grounding guidelines

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

CAUTION: To prevent damage to the tablet when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

CAUTION: A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels			
Event	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screw drivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.


The following grounding equipment is recommended to prevent electrostatic damage:


- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

Material	Use	Voltage protection level
Antistatic plastics	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V

5 Removal and replacement procedures for Authorized Service Provider parts

 **NOTE:** Components described in this chapter should only be accessed by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Labels on page 7](#) for details.

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

Component replacement procedures

This chapter provides removal and replacement procedures for Authorized Service Provider only parts.

There are as many as 52 screws that must be removed, replaced, and/or loosened when servicing the computer. Make special note of each screw size and location during removal and replacement.

Keyboard/top cover

For use in country or region	Spare part number	For use in country or region	Spare part number
For use in magenta models:			
For use in Belgium	792792-A41	For use in Portugal	792792-131
For use in Bulgaria	792792-261	For use in Romania	792792-271
For use in Canada	792792-DB1	For use in Russia	792792-251
For use in the Czech Republic and Slovakia	792792-FL1	For use in Saudi Arabia	792792-171
For use in Denmark, Finland, and Norway	792792-DH1	For use in Slovenia	792792-BA1
For use in France	792792-051	For use in South Korea	792792-AD1
For use in Germany	792792-041	For use in Spain	792792-071
For use in Greece	792792-151	For use in Switzerland	792792-BG1
For use in Hungary	792792-211	For use in Taiwan	792792-AD1
For use in Israel	792792-BB1	For use in Thailand	792792-281
For use in Italy	792792-061	For use in Turkey	792792-141
For use in Latin America	792792-161	For use in the United Kingdom and Singapore	792792-031
For use in Japan	792792-291	For use in the United States	792792-001
For use in the Netherlands	792792-B31		

For use in country or region	Spare part number	For use in country or region	Spare part number
For use in blue models:			
For use in Belgium	792791-A41	For use in Portugal	792791-131
For use in Bulgaria	792791-261	For use in Romania	792791-271
For use in Canada	792791-DB1	For use in Russia	792791-251
For use in the Czech Republic and Slovakia	792791-FL1	For use in Saudi Arabia	792791-171
For use in Denmark, Finland, and Norway	792791-DH1	For use in Slovenia	792791-BA1
For use in France	792791-051	For use in South Korea	792791-AD1
For use in Germany	792791-041	For use in Spain	792791-071
For use in Greece	792791-151	For use in Switzerland	792791-BG1
For use in Hungary	792791-211	For use in Taiwan	792791-AD1
For use in Israel	792791-BB1	For use in Thailand	792791-281
For use in Italy	792791-061	For use in Turkey	792791-141
For use in Latin America	792791-161	For use in the United Kingdom and Singapore	792791-031
For use in Japan	792791-291	For use in the United States	792791-001
For use in the Netherlands	792791-B31		

Before removing the disassembling, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.




NOTE: When replacing the keyboard/top cover, be sure that the TouchPad assembly (see [TouchPad on page 27](#)) and power button board (see [Power button board on page 28](#)) are removed from the defective keyboard/top cover and installed on the replacement keyboard/top cover:

Remove the keyboard/top cover:


1. Close the computer.
2. Turn the computer upside down with the front toward you.
3. Remove the four larger computer feet **(1)** from the corners of the computer bottom.
4. Remove the two smaller computer rear feet **(2)** from near the rear corners of the computer bottom.

5. Remove one screw cover **(3)** from the middle rear of the computer bottom.

The screw covers and the computer rear feet are included in the Rubber Kit, spare part number 792782-001.

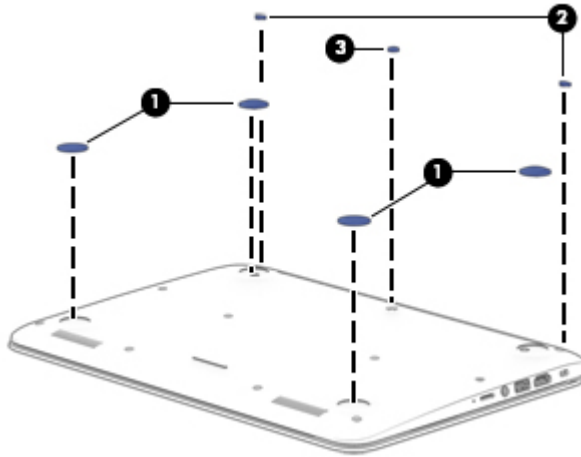

6. Remove the 13 Phillips PM2.5×6.0 screws that secure the keyboard/top cover to the bottom cover.

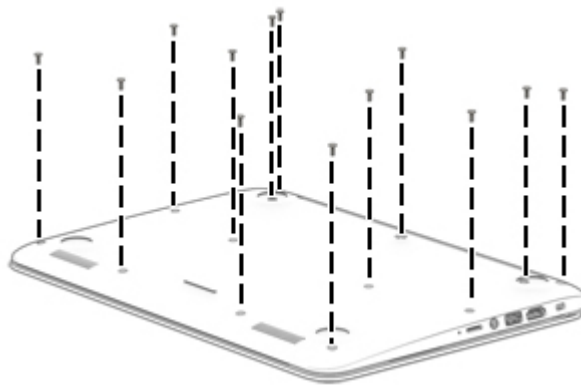

7. Turn the computer right side up, with the front toward you.
8. Open the computer.

⚠ CAUTION: Do not completely separate the keyboard/top cover from the bottom cover in the next step. There are ribbon cables connecting the keyboard/top cover to the system board that can be damaged if too much separation is achieved.

9. Lift the front edge **(1)** of the keyboard/top cover until it **(2)** separates from the bottom cover.
10. Disconnect the following cables from the system board:
 - (3):** Battery cable
 - (4):** Touchpad cable
 - (5):** Keyboard cable
 - (6):** Power button board cable

- 11.** Remove the keyboard/top cover from the computer **(7)**.



Reverse this procedure to install the keyboard/top cover.

TouchPad

Description	Spare part number
TouchPad for use in models without WWAN (includes cable)	795911-001
TouchPad for use in models with WWAN (includes cable)	792776-001

Before removing the TouchPad, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the keyboard/top cover (see [Keyboard/top cover on page 23](#)).


Remove the TouchPad:

1. Position the keyboard/top cover upside down with the front toward you.
2. Remove the two Phillips PM2.0×2.0 broad head screws **(1)** that secure the TouchPad to the keyboard/top cover.



NOTE: When removing the TouchPad, make sure the cable is released through the opening in the keyboard/top cover.

3. Remove the TouchPad and cable **(2)** by releasing them downward **(3)** from the top surface of the keyboard/top cover.

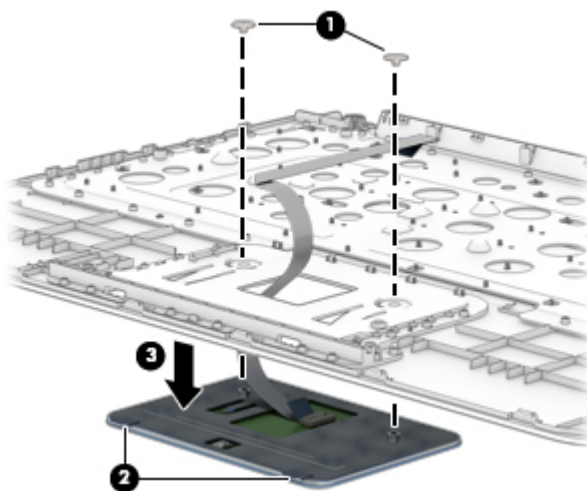

Reverse this procedure to install the TouchPad.

Power button board


Description	Spare part number
Power button board (includes cable)	792777-001

Before removing the power button board, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the keyboard/top cover (see [Keyboard/top cover on page 23](#)).

Remove the power button board:


1. Position the keyboard/top cover upside down.
2. Remove the PM2.0×2.0 broad head screw **(1)** that secures the power button board to the keyboard/top cover.
3. Lift the board to disengage it from the posts built into the top cover **(2)** and then remove the board **(3)**.

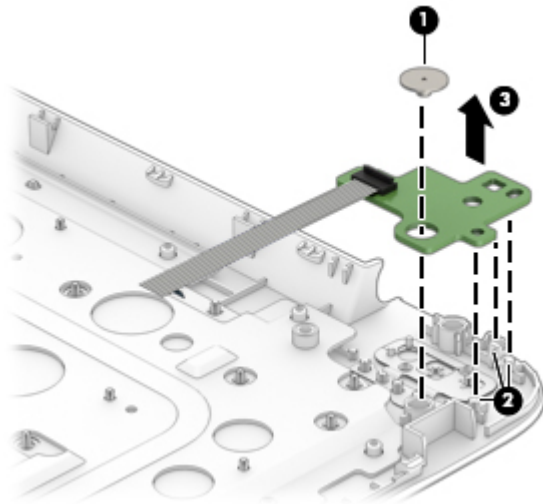

Reverse this procedure to install the power button board.

WLAN module

Description	Spare part number
Broadcom BCM43142 802.11 bgn 1x1 Wi-Fi + BT4.0 HMC Combo Adapter	753077-005
Intel Dual Band Wireless-AC 3160 802.11 ac 1x1 WiFi + Bluetooth 4.0 Combo Adapter	784638-005

 **CAUTION:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the keyboard/top cover (see [Keyboard/top cover on page 23](#)). Make sure the battery cable is disconnected from the system board.

Remove the WLAN module:

1. Disconnect the WLAN antenna cables **(1)** from the terminal on the WLAN module.




NOTE: The 1/black WLAN antenna cable is connected to the WLAN module 1/Main terminal.

Either one or two antennas may be connected to the module.

2. Remove the Phillips PM2.0×3.0 screw **(2)** that secures the WLAN module to the computer. (The WLAN module tilts up.)

3. Remove the WLAN module (3) by pulling the module away from the slot at an angle.

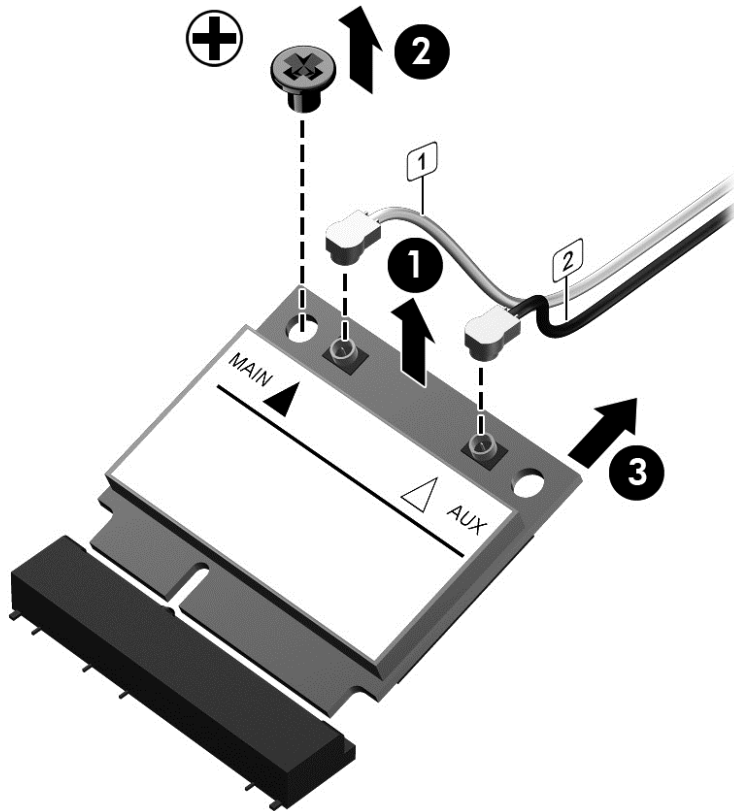


NOTE: If the WLAN antenna is not connected to the terminal on the WLAN module, a protective sleeve must be installed on the antenna connector, as shown in the following illustration.



Reverse this procedure to install the WLAN module.

WWAN/GPS module

Description	Spare part number
HP hs3110 HSPA+ Mobile Broadband Module	748599-005
HP hs3114 HSPA+ Mobile Broadband Module	748600-005

 **CAUTION:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.


Before removing the WWAN module, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the keyboard/top cover (see [Keyboard/top cover on page 23](#)). Make sure the battery cable is disconnected from the system board.

Remove the WWAN module:

1. Disconnect the antenna cables **(1)** from the terminals on the WWAN module.
2. Remove the Phillips PM2.0×3.0 screw **(2)** that secures the WLAN module to the computer.

3. Remove the WWAN module (3) by pulling the module away from the slot at an angle.

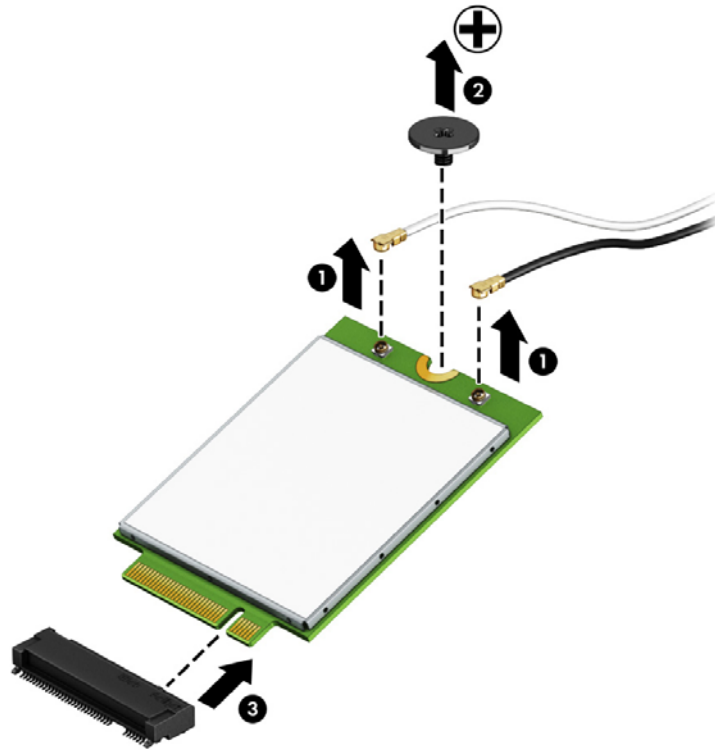

 **NOTE:** If the WLAN antenna is not connected to the terminal on the WWAN module, a protective sleeve must be installed on the antenna connector, as shown in the following illustration.



Reverse this procedure to install the WWAN module.

Battery


Description	Spare part number
Battery, 3-cell, 37-WHr, 3.25-AHr, Li-ion (includes cable)	787521-005

Before removing the battery, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the keyboard/top cover (see [Keyboard/top cover on page 23](#)).

Remove the battery:

1. Remove the eight PM2.0×3.0 screws (1) that secure the battery to the bottom cover.
2. Lift the battery from the computer (2).

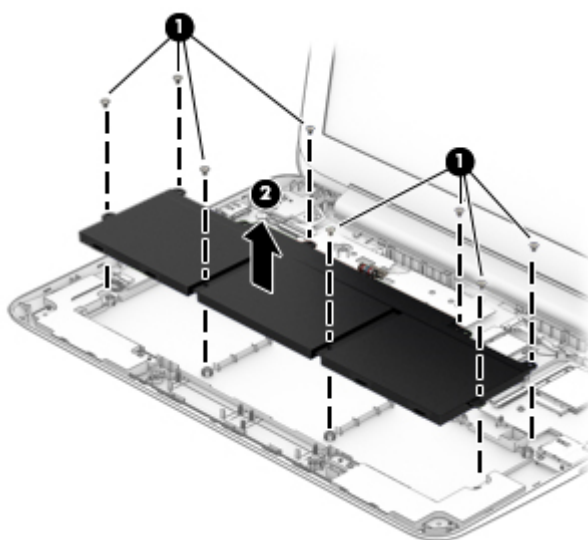

Reverse this procedure to install the battery.

USB/card reader board


Description	Spare part number
USB/card reader board for use in models without WWAN (includes cable)	792778-001
USB/card reader board for use in models with WWAN (includes cable)	792769-001

Before removing the USB/card reader board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the keyboard/top cover (see [Keyboard/top cover on page 23](#)).
5. Remove the battery (see [Battery on page 33](#)).
6. Remove the WWAN/GPS module (see [WWAN/GPS module on page 31](#)).

Remove the USB/card reader board:

1. Disconnect the cable from the system board **(1)**.
2. Remove the three Phillips PM2.0×3.0 screws **(2)** that secure the USB/card reader board to the computer.
3. Rotate left side of board up and pull it toward the left to remove it from connectors, and then remove the board from the computer **(3)**.

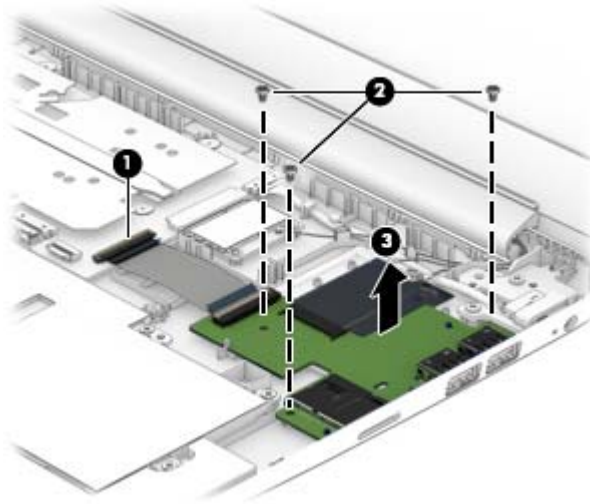

Reverse this procedure to install the USB/card reader board.

Speakers


Description	Spare part number
Speakers (include left and right speakers and cables)	792784-001

Before removing the speakers, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the keyboard/top cover (see [Keyboard/top cover on page 23](#)).
5. Remove the battery (see [Battery on page 33](#)).

Remove the speakers:

1. Disconnect the speaker cable **(1)** from the system board.
2. Remove the two Phillips PM2.0×3.0 screws **(2)** that secure the speakers to the bottom cover.
3. Lift the speakers from the computer **(3)**.

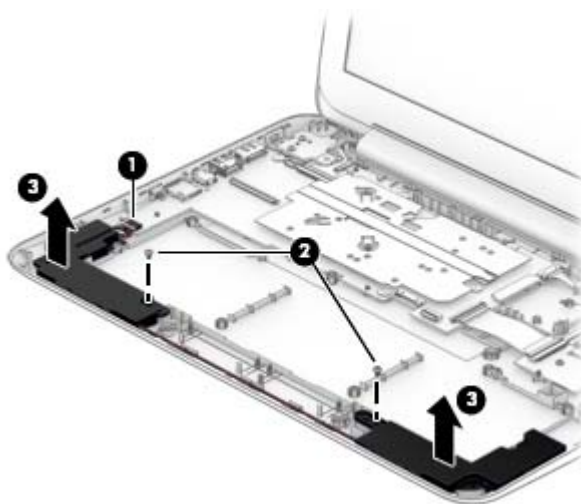

Reverse this procedure to install the speakers.

Heat sink


Description	Spare part number
Heat sink (includes thermal cloth)	792773-001


Before removing the heat sink, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the keyboard/top cover (see [Keyboard/top cover on page 23](#)).
5. Remove the battery (see [Battery on page 33](#)).

Remove the heat sink:

1. Remove the two Phillips PM2.0×2.0 screws **(1)** that secure the heat sink to the system board.
2. Lift the heat sink off the system board **(2)**.

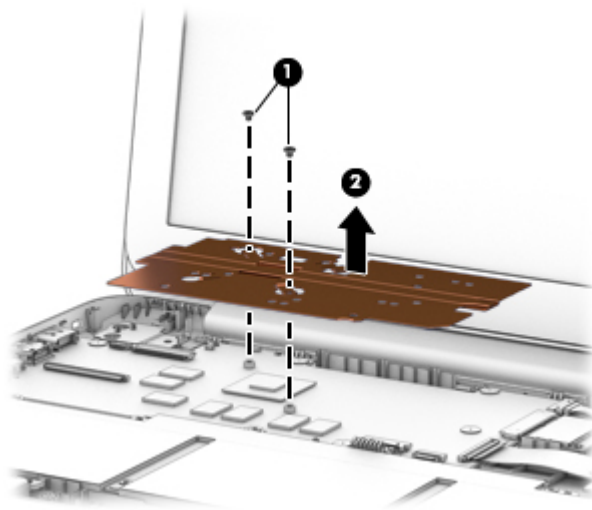

 **NOTE:** The thermal material must be thoroughly cleaned from the surfaces of the heat sink and the system board each time the heat sink is removed. Thermal material is used on the processor **(1)** and the heat sink section **(2)** that services it.

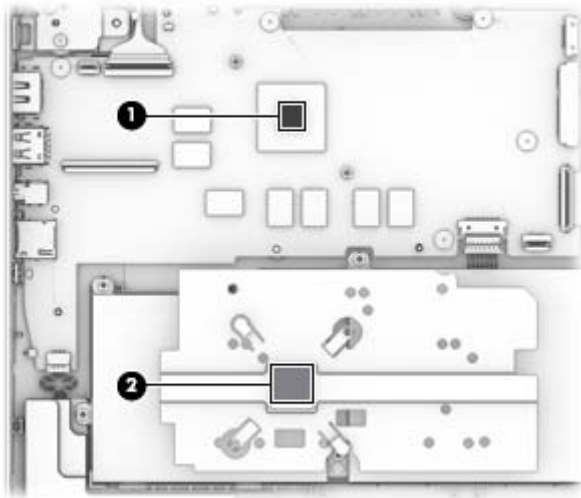

Reverse this procedure to install the heat sink.

System board


Description	Spare part number
Equipped with an Intel Celeron N2840 processor with 2 GB system memory, 64 GB eMMC hard drive, and the Windows 8 Standard operating system (includes thermal grease and thermal pads)	792786-501
Equipped with an Intel Celeron N2840 processor with 2 GB system memory, 64 GB eMMC hard drive, and a non-Windows 8 operating system (includes thermal grease and thermal pads)	792786-001
Equipped with an Intel Celeron N2840 processor with 2 GB system memory, 32 GB eMMC hard drive, and the Windows 8 Standard operating system (includes thermal grease and thermal pads)	792785-501
Equipped with an Intel Celeron N2840 processor with 2 GB system memory, 32 GB eMMC hard drive, and a non-Windows 8 operating system (includes thermal grease and thermal pads)	792785-001

Before removing the system board, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the keyboard/top cover (see [Keyboard/top cover on page 23](#)), and then remove the following components:
 - a. Battery (see [Battery on page 33](#))
 - b. WLAN module (see [WLAN module on page 29](#))
 - c. WWAN/GPS module (see [WWAN/GPS module on page 31](#))
 - d. Heat sink (see [Heat sink on page 36](#))

Remove the system board:

1. Disconnect the following cables from the system board:
 - (1): Display cable
 - (2): Power connector cable
 - (3): USB/card reader board cable
 - (4): Speaker cable

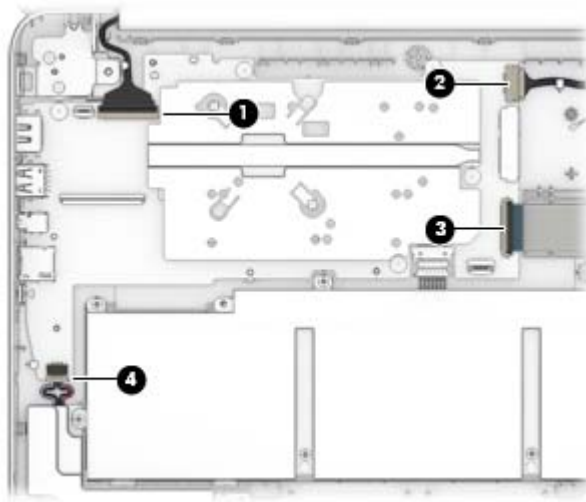

2. Remove the five Phillips PM2.0×2.0 broad head screws **(1)** that secure the system board to the bottom cover.
3. Lift the right side of the system board **(2)**, and then pull the system board toward the right to remove it from the computer **(3)**.

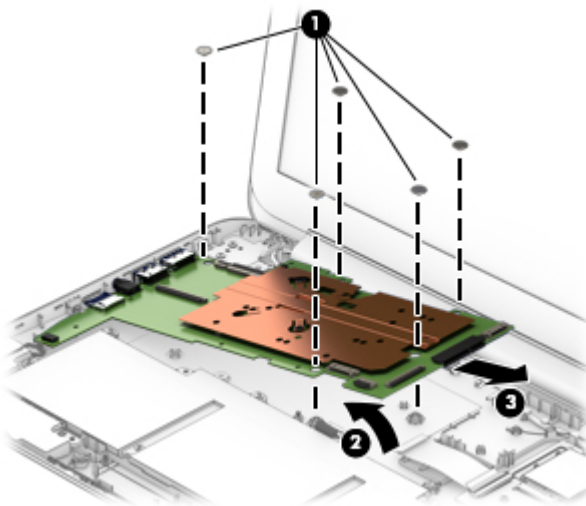

Reverse this procedure to install the system board.

Display assembly – non-touchscreen models




NOTE: The display assembly is spared at the subcomponent level only. For display assembly spare part information, see the individual removal subsections.

Before removing the display assembly, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the keyboard/top cover (see [Keyboard/top cover on page 23](#)).
5. Disconnect the battery cable from the system board (see [Battery on page 33](#)).

Remove the display assembly:

1. Disconnect the display cable from the system board **(1)**.
2. Disconnect the WLAN and WWAN/GPS antenna cables **(2)** from the terminals on the WLAN and WWAN/GPS modules.
3. Release the display panel cable and the wireless antenna cables from the routing channels and clips **(3)** built into the bottom cover.
4. Remove the four Phillips PM2.5×4.5 screws **(4)** that secure the display assembly to the bottom cover.
5. Remove the display assembly **(5)**.

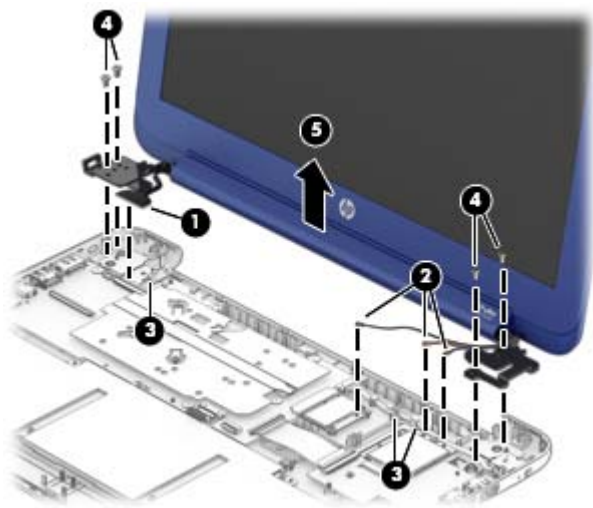


6. If it is necessary to replace the display back cover or any of the display assembly internal components:
 - a. Remove the display bezel screw covers **(1)**.

- b. Remove the two Phillips PM2.0×3.0 screws **(2)** that secure the bezel to the display assembly.




NOTE: The screw covers may be difficult to remove. If you need to replace the covers, they are available in the Rubber Kit, spare part number 792782-001.

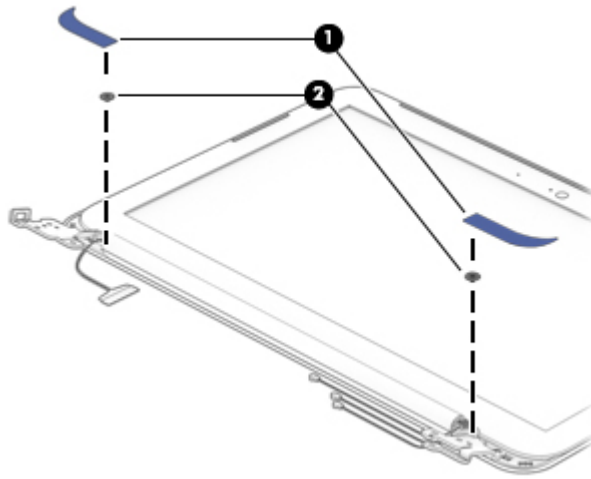

- c. Flex the inside edges of the top edge **(1)**, the left and right sides **(2)**, and the bottom edge **(3)** of the display bezel until the bezel disengages from the display back cover.
- d. Remove the display bezel **(4)**.


The display bezel is available using spare part number 792768-001 for magenta models and 792767-001 for blue models.

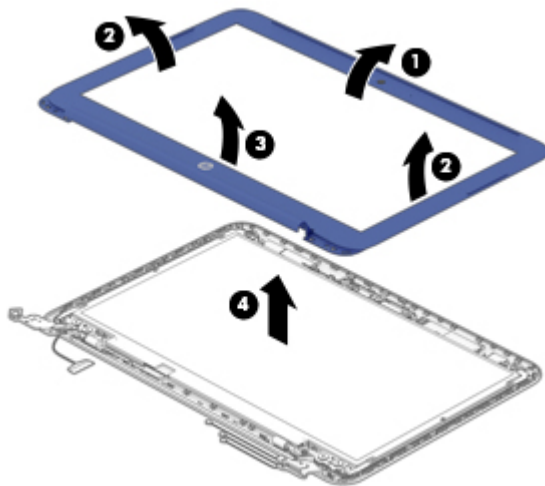

7. If it is necessary to replace the webcam/microphone module:
- a. Disconnect the webcam/microphone module cable **(1)** from the module.


- b. Detach and remove the module **(2)** from the display back cover. (The webcam/microphone module is attached to the display back cover with double-sided adhesive.)

The webcam/microphone module is available using spare part number 793616-001 for models without a touchscreen.

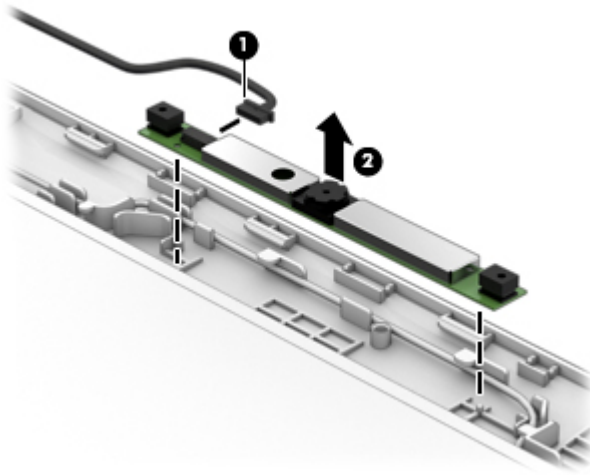


8. If it is necessary to replace the display panel:

- a. Remove the four Phillips PM1.5×2.5 screws **(1)** that secure the display panel to the display back cover.

 **CAUTION:** Before turning the display panel upside down, make sure the work surface is clear of tools, screws, and any other foreign objects. Failure to follow this caution can result in damage to the display panel.

- b. Lift the top edge of the display panel **(2)** and swing it up and forward until it rests upside down in front of the display back cover.

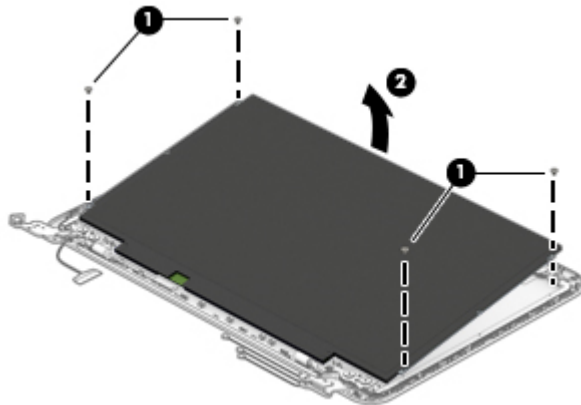

- c. Release the adhesive strip **(1)** that secures the display panel cable connector to the display panel.
- d. Disconnect the display panel cable **(2)** from the display panel.

- e. Remove the display panel **(3)**.

The display panel is available using spare part number 792779-001 for models without a touchscreen.

The display back cover is available using the following spare part numbers:

792760-001: Magenta models without a touchscreen


792761-001: Blue models without a touchscreen



9. If it is necessary to replace the display hinges:

- Remove the four Phillips PM2.5×3.0 broad head screws **(1)** that secure the display hinges to the display back cover.
- Remove the two Phillips PM2.0×2.5 screws **(2)** on the bottom of the hinges and the two Phillips PM2.0×2.5 screws **(3)** at the top of the hinges that secure the hinges to the display back cover.
- Remove the display hinges **(4)**.

The display hinges are included in the Display Hinge Kit, spare part number 792774-001 for models without a touchscreen.

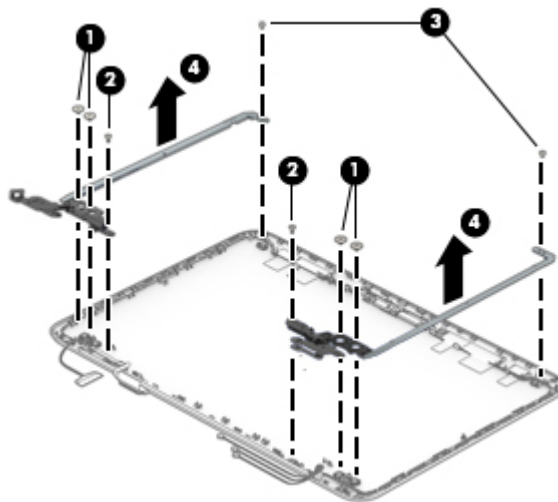


10. If it is necessary to replace the display panel cable:

- a.** Release the display panel cable from the retention clips **(1)** and channel built into the display back cover.
- b.** Remove the display panel cable **(2)**.

The display panel cable includes the webcam/microphone module cable and is available using the following spare part numbers:

792771-001: Models without a touchscreen and without WWAN

798215-001: Models without a touchscreen and with WWAN

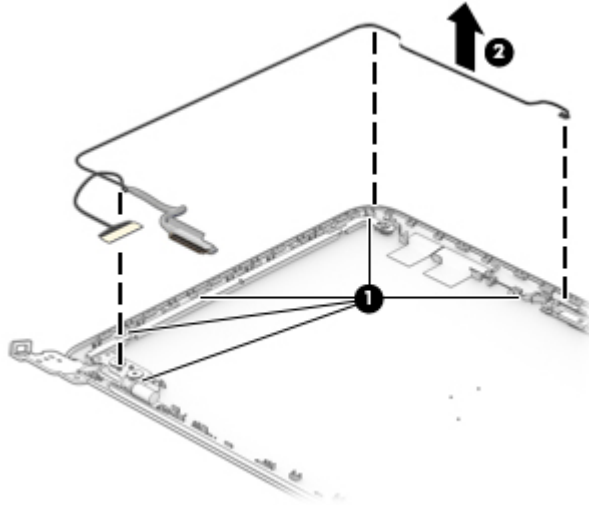


11. If it is necessary to replace the WLAN antenna cable and transceiver:

- a.** Detach the antenna transceivers **(1)** from the display back cover. (The transceivers are attached to the display back cover with double-sided adhesive.)
- b.** Release the shielding tape **(2)** that secures the antenna cables to the display back cover.


- c. Release the antenna cables from the retention clips **(2)** and channel built into the top edge and right side of the display back cover.

The antenna cables and transceivers are included in the WLAN Antenna Kit, spare part number 792758-001 and WWAN Antenna Kit, spare part number 792757-001.

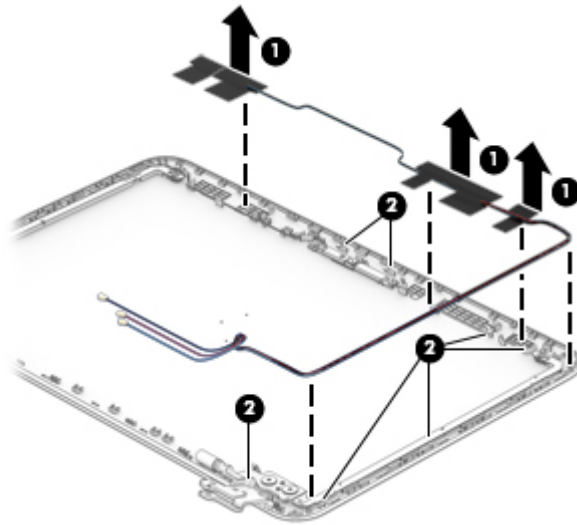

Reverse this procedure to reassemble and install the display assembly.

Display assembly – touchscreen models


 **NOTE:** The display assembly is spared at the subcomponent level only. For display assembly spare part information, see the individual removal subsections.

Before removing the display assembly, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the keyboard/top cover (see [Keyboard/top cover on page 23](#)).
5. Disconnect the battery cable from the system board (see [Battery on page 33](#)).

Remove the display assembly:

1. Disconnect the display cable from the system board **(1)**.
2. Disconnect the WLAN and WWAN/GPS antenna cables **(2)** from the terminals on the WLAN and WWAN/GPS modules.
3. Release the display panel cable and the wireless antenna cables from the routing channels and clips **(3)** built into the bottom cover.
4. Remove the four Phillips PM2.5×4.5 screws **(4)** that secure the display assembly to the bottom cover.
5. Remove the display assembly **(5)**.

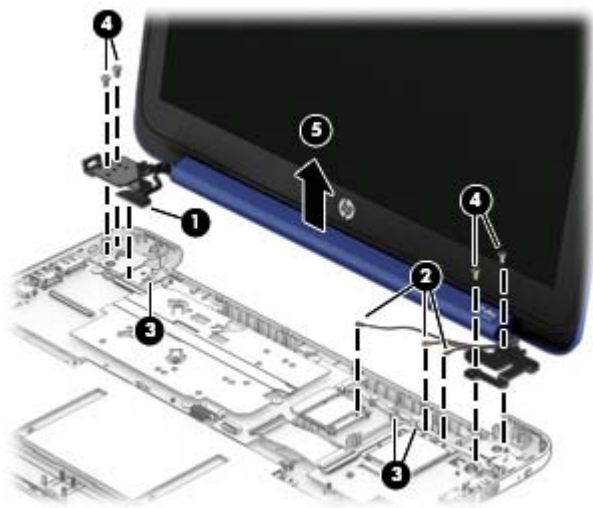


6. If it is necessary to replace the display back cover or any of the display assembly internal components:
 - a. Remove the display screw covers **(1)**.

- b. Remove the two Phillips PM2.0×3.0 screws **(2)** that secure the to the display assembly.



NOTE: The screw covers may be difficult to remove. If you need to replace the covers, a Mylar screw cover kit is included in all display spare part kits.

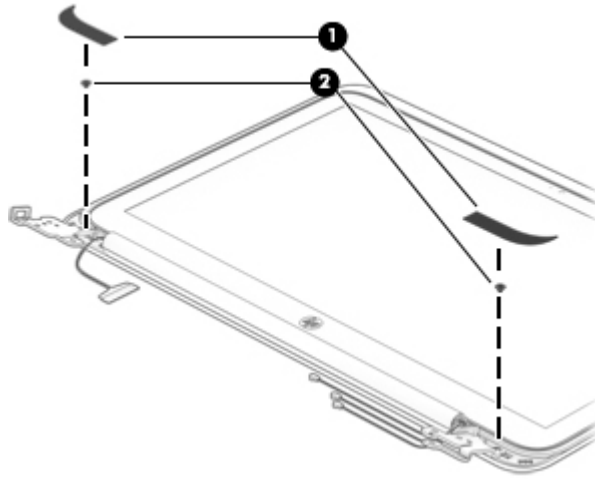

- c. Lift the top of the rear cover upward **(1)**, and then lift the cover from the display **(2)**.

The display rear cover is available using spare part number 792759-001.




7. If it is necessary to replace the webcam/microphone module:

- a. Disconnect the webcam/microphone module cable **(1)** from the module.

- b. Detach and remove the module **(2)** from the display back cover. (The webcam/microphone module is attached to the display back cover with double-sided adhesive.)


The webcam/microphone module is available using spare part number 792793-001 for models with a touchscreen.

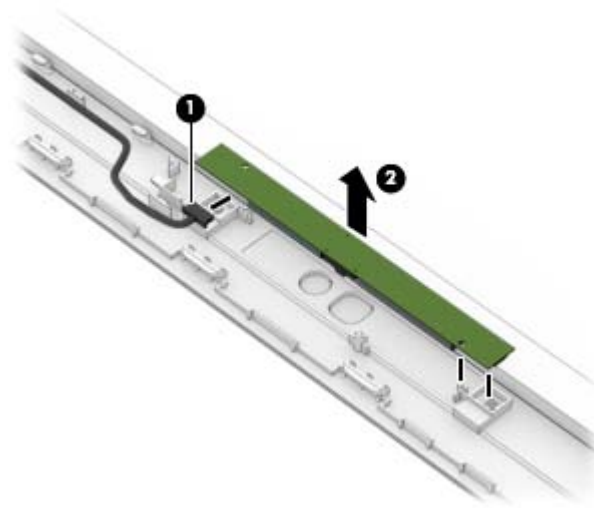

8. If it is necessary to replace the display hinges:

- a. Remove the four Phillips PM2.5×3.0 broad head screws **(1)** that secure the display hinges to the display back cover.
- b. Remove the two Phillips PM2.0×2.5 screws **(2)** on the bottom of the hinges and the two Phillips PM2.0×2.5 screws **(3)** at the top of the hinges that secure the hinges to the display back cover.
- c. Remove the display hinges **(4)**.

The display hinges are included in the Display Hinge Kit, spare part number 792775-001 for touchscreen models.

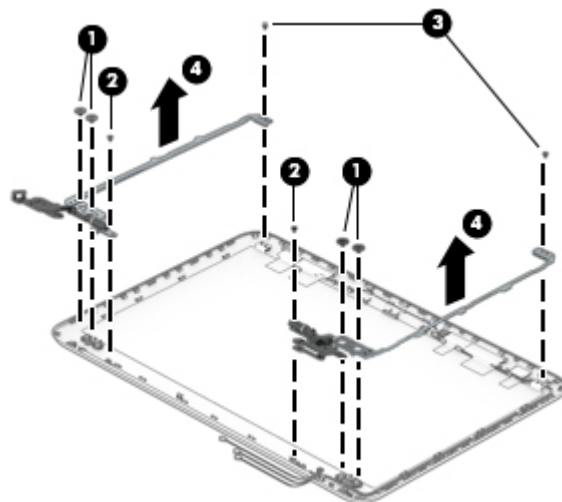

9. If it is necessary to replace the display panel cable:


- a. Lift the Mylar tape from atop the connector on the panel **(1)**, and then disconnect the cable from the connector **(2)**.
- b. Disconnect the cable from the webcam module **(3)**.

- c. Remove the cable from the clips on the side of the display panel **(4)**, and then remove the display cable from the display **(5)**.

The display panel cable includes the webcam/microphone module cable and is available using the following spare part numbers:

792772-001: Models with a touchscreen and without WWAN


798216-001: Models with a touchscreen and with WWAN

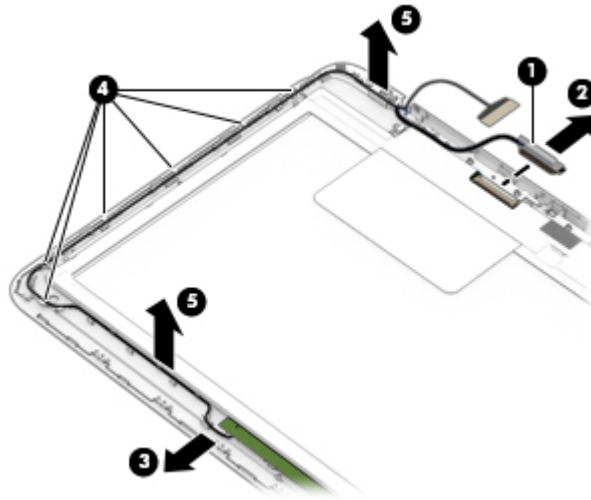

10. If it is necessary to replace the WLAN antenna cable and transceiver:

- a. Detach the antenna transceivers **(1)** from the display back cover. (The transceivers are attached to the display back cover with double-sided adhesive.)
- b. Release the shielding tape **(2)** that secures the antenna cables to the display back cover.
- c. Release the antenna cables from the retention clips **(2)** and channel built into the top edge and right side of the display back cover.

The antenna cables and transceivers are included in the WLAN Antenna Kit, spare part number 792758-001 and WWAN Antenna Kit, spare part number 792757-001.

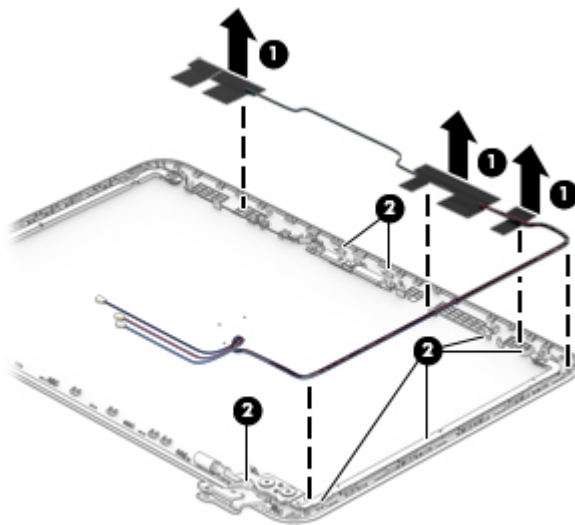

Reverse this procedure to reassemble and install the display assembly.

Power connector cable


Description	Spare part number
Power connector cable (includes tape)	796086-001

Before removing the power connector cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the keyboard/top cover (see [Keyboard/top cover on page 23](#)).
5. Disconnect the battery cable from the system board (see [Battery on page 33](#)).
6. Remove the display assembly (see [Display assembly – non-touchscreen models on page 40](#)) or [Display assembly – touchscreen models on page 46](#).

Remove the power connector cable:

1. Disconnect the power connector cable **(1)** from the system board.
2. Release the power connector **(2)** from the retention clips built into the bottom cover.
3. Remove the power connector cable **(3)**.

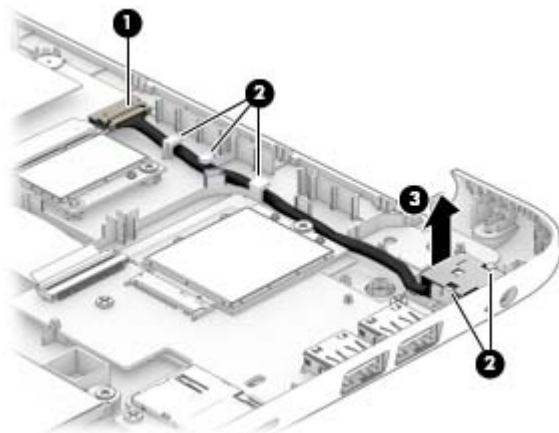

Reverse this procedure to install the power connector cable.

6 Using Setup Utility (BIOS) and HP PC Hardware Diagnostics (UEFI)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

Starting Setup Utility (BIOS)

To start Setup Utility (BIOS), turn on or restart the computer, quickly press **esc**, and then press **f10**.



NOTE: Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.


Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be revealed by pressing **fn+esc** (if you are already in Windows) or by using Setup Utility (BIOS).

1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 51](#)).
2. Use the arrow keys to select **Main**.
3. To exit Setup Utility (BIOS) without saving your changes, use the arrow keys to select **Exit**, select **Exit Discarding Changes**, and then press **enter**.
4. Select **Yes**.

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:


Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.


1. From the Start screen, type `hp support assistant`, and then select the **HP Support Assistant** app.
2. Click **Updates and tune-ups**, and then click **Check for HP updates now**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS, make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

If the update is more recent than your BIOS, make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are revealed on the screen after the download is complete. If no instructions are revealed, follow these steps:

1. From the Start screen, type `file`, and then select **File Explorer**.
2. Click your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
4. Double-click the file that has an `.exe` extension (for example, *filename.exe*). The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Using HP PC Hardware Diagnostics (UEFI)

HP PC Hardware Diagnostics is a Unified Extensible Firmware Interface (UEFI) that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

To start HP PC Hardware Diagnostics UEFI:

1. Turn on or restart the computer, quickly press [esc](#), and then press [f2](#).

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB drive



NOTE: To download the HP PC Hardware Diagnostics (UEFI) tool to a USB drive, see [Downloading HP PC Hardware Diagnostics \(UEFI\) to a USB device on page 53](#).

- b. Hard drive

- c. BIOS

2. When the diagnostic tool opens, use the keyboard arrow keys to select the type of diagnostic test you want to run, and then follow the on-screen instructions.



NOTE: If you need to stop a diagnostic test, press [esc](#).

Downloading HP PC Hardware Diagnostics (UEFI) to a USB device



NOTE: Instructions for downloading HP PC Hardware Diagnostics (UEFI) are provided in English only.

There are two options to download HP PC Hardware Diagnostics to a USB device:

Option 1: HP PC Diagnostics homepage—Provides access to the latest UEFI version

1. Go to <http://hp.com/go/techcenter/pcdiags>.
2. Click the **Download** link, and then select **Run**.

Option 2: Support and Drivers page—Provides downloads for a specific product for earlier and later versions

1. Go to <http://www.hp.com>.
2. Point to **Support**, located at the top of the page, and then click **Download Drivers**.
3. In the text box, enter the product name, and then click **Go**.

– or –

Click **Find Now** to let HP automatically detect your product.

4. Select your computer model, and then select your operating system.
5. In the **Diagnostic** section, click **HP UEFI Support Environment**.

– or –

Click **Download**, and then select **Run**.

7 Specifications

Computer specifications

	Metric	U.S.
Tablet dimensions		
Width	33.32 cm	13.11 in
Depth	22.44 cm	8.84 in
Height (front to rear)	0.69 to 2.14 cm	0.27 to 0.84 in
Weight (equipped with hard drive)	1.70 kg	3.75 lbs
Weight (equipped with solid-state drive)	1.55 kg	3.42 lbs
Input power		
Operating voltage and current	19.5 V dc @ 2.31 A – 45 W	
	19.5 V dc @ 3.33 A – 65 W (select models only)	
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft
NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

33.8-cm (13.3-in), HD display specifications

	Metric	U.S.
Active diagonal size	33.8-cm	13.3-in
Resolution	1280x800	
Display colors	262K	
Surface treatment	Anti-glare	
Contrast ratio	300:1 (typical)	
Brightness	200 nits (typical)	
Viewing angle	SVA	
Backlight	LED	
Response time	5.5 ms/10.5 ms (Typ)(Tr/Td)	
Viewing angle	45/45/15/35 (Typ)(L/R/U/D)	

8 Backing up, restoring, and recovering

This chapter provides information about the following processes:

- Creating recovery media and backups
- Restoring and recovering your system

Creating recovery media and backups

1. After you successfully set up the computer, create HP Recovery media. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced.

HP Recovery media you create will provide the following recovery options:

- **System Recovery**—Reinstalls the original operating system and the programs that were installed at the factory.
- **Minimized Image Recovery**—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- **Factory Reset**—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

See [Creating HP Recovery media on page 57](#).

2. Use the Windows tools to create system restore points and create backups of personal information. For more information and steps, see Help and Support. From the Start screen, type `help`, and then select **Help and Support**.

Creating HP Recovery media

HP Recovery Manager is a software program that offers a way to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and the software programs installed at the factory, and then configures the settings for the programs. HP Recovery media can also be used to customize the system or restore the factory image if you replace the hard drive.

- Only one set of HP Recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
- HP Recovery Manager examines the computer and determines the required storage capacity for the blank USB flash drive or the number of blank DVD discs that will be required.
- To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, or DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or instead you can use a high-quality blank USB flash drive.
- If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs, or you can obtain recovery discs for your computer from support. See the **Worldwide Telephone Numbers** booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub.
- Be sure that the computer is connected to AC power before you begin creating the recovery media.
- The creation process can take up to an hour or more. Do not interrupt the creation process.
- If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue, and the remaining discs will be burned.

To create HP Recovery media:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Recovery Media Creation**, and then follow the on-screen instructions.

If you ever need to recover the system, see [Recovering using HP Recovery Manager on page 59](#).

Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:

- Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state. For more information and steps, see Help and Support. From the Start screen, type `help`, and then select **Help and Support**.
- If you need to correct a problem with a preinstalled application or driver, use the Drivers and Applications Reinstall option of HP Recovery Manager to reinstall the individual application or driver.

From the Start screen, type `recovery`, select **HP Recovery Manager**, select **Drivers and Applications Reinstall**, and then follow the on-screen instructions.

- If you want to reset your computer using a minimized image, you can choose the HP Minimized Image Recovery option from the HP Recovery partition (select models only) or HP Recovery media. Minimized Image Recovery installs only drivers and hardware-enabling applications. Other applications included in the image continue to be available for installation through the Drivers and Applications Reinstall option in HP Recovery Manager.

For more information, see [Recovering using HP Recovery Manager on page 59](#).

- If you want to recover the computer's original factory partitioning and content, you can choose the System Recovery option from the HP Recovery partition (select models only) or use the HP Recovery media that you have created. For more information, see [Recovering using HP Recovery Manager on page 59](#). If you have not already created recovery media, see [Creating HP Recovery media on page 57](#).
- If you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media to restore the factory image to the replacement drive. For more information, see [Recovering using HP Recovery Manager on page 59](#).
- If you wish to remove the recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.

For more information, see [Removing the HP Recovery partition \(select models only\) on page 61](#).

Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state by using the HP Recovery media that you created or by using the HP Recovery partition (select models only). If you have not already created recovery media, see [Creating HP Recovery media on page 57](#).

Using HP Recovery media, you can choose from one of the following recovery options:

- **System Recovery**—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- **Minimized Image Recovery** (select models only)—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- **Factory Reset**—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition (select models only) allows System Recovery and Minimized Image Recovery.

What you need to know

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.
- Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.
- HP Recovery media must be used if the computer hard drive fails. If you have not already created recovery media, see [Creating HP Recovery media on page 57](#).
- To use the Factory Reset option, you must use HP Recovery media. If you have not already created recovery media, see [Creating HP Recovery media on page 57](#).
- If the HP Recovery media does not work, you can obtain recovery media for your system from support. See the Worldwide Telephone Numbers booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.



IMPORTANT: HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you wish to retain.

Using the HP Recovery partition (select models only)

The HP Recovery partition (select models only) allows you to perform a system recovery or minimized image recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can only be used if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:

1. Press **f11** while the computer boots.
– or –
Press and hold **f11** as you press the power button.
2. Select **Troubleshoot** from the boot options menu.
3. Select **Recovery Manager**, and then follow the on-screen instructions.

Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the HP Recovery media that you created, and then restart the computer.



NOTE: If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 60](#).

3. Follow the on-screen instructions.

Changing the computer boot order

If computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection for an optical drive or a USB flash drive.

To change the boot order:

1. Insert the HP Recovery media you created.
2. Restart the computer, quickly press **esc**, and then press **f9** for boot options.
3. Select the optical drive or USB flash drive you want to boot from.
4. Follow the on-screen instructions.

Removing the HP Recovery partition (select models only)

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.



IMPORTANT: After you remove the HP Recovery partition, you can no longer use the Windows Refresh option or the Windows option to remove everything and reinstall Windows. In addition, you will not be able to perform System Recovery or Minimized Image Recovery from the HP Recovery partition. So before you remove the Recovery partition, create HP Recovery media; see [Creating HP Recovery media on page 57](#).

Follow these steps to remove the HP Recovery partition:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and then follow the on-screen instructions.

9 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC, or from 220 to 240 volts AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least 1.0 m (3.3 ft) and no more than 2.0 m (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer. Requirements for all countries 113

Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Australia	EANSW	1
Austria	OVE	1
Belgium	CEBC	1
Canada	CSA	2
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
Italy	IMQ	1
Japan	METI	3
The Netherlands	KEMA	1
Norway	NEMKO	1
The People's Republic of China	COC	5

Country/region	Accredited agency	Applicable note number
South Korea	EK	4
Sweden	CEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	4
The United Kingdom	BSI	1
The United States	UL	2
<ol style="list-style-type: none"> 1. The flexible cord must be Type H05VV-F, 3-conductor, 1.0-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used. 2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration. 3. The appliance coupler, flexible cord, and wall plug must bear a “T” mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00-mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration. 4. The flexible cord must be Type RVV, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used. 5. The flexible cord must be Type VCTF, 3-conductor, 0.75-mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used. 		

10 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.

Index

A

AC adapter light 6
AC adapter, spare part numbers 14, 15
antenna
 location 3
 removal 44, 49
 spare part number 12, 14, 15, 45, 49
Antenna Kit, spare part number 12, 14, 15, 45, 49
audio, product description 1
audio-in jack 5
audio-out jack 5

B

base enclosure, spare part number 11
battery
 removal 33
 spare part number 10, 15, 33
Bluetooth label 7
bottom 7
buttons
 power 3

C

cables, service considerations 19
chipset, product description 1
components
 display 3
 left side 5
 rear 6
 right side 6
computer
 major components 8
 specifications 54
connectors, service considerations 19

D

display assembly
 removal 40, 46
 spare part numbers 12, 13

display back cover, spare part number 13, 14, 15
display bezel
 removal 40, 46
 spare part number 12, 16, 41, 47
Display Hinge Kit, spare part number 12, 13, 16, 43, 48
display panel
 product description 1
 removal 42
 spare part number 12, 13, 16, 43
display panel cable
 removal 44, 48
 spare part number 12, 13, 16, 18, 44, 49
display specifications 55
display, exterior components 3
DVD±RW DL SuperMulti Drive, spare part number 14, 15

E

electrostatic discharge 20
equipment guidelines 22
external media cards, product description 2

F

feet
 removal 24

G

GPS module
 removal 31
 spare part numbers 31
graphics, product description 1
grounding guidelines 20
guidelines
 equipment 22
 grounding 20
 packaging 21
 transporting 21
 workstation 21

H

hard drive
 product description 1
HDMI port 5
HDMI-to-VGA adapter, spare part number 14, 15
headphone jack 5
heat sink
 removal 36
 spare part number 10, 16, 36
hinge
 removal 43, 48
 spare part number 12, 13, 16, 43, 48
HP PC Hardware Diagnostics (UEFI)
 downloading 53

J

jacks
 audio-in 5
 audio-out 5
 headphone 5
 microphone 5

K

keyboard/top cover
 removal 23
 spare part numbers 9, 16, 17, 18, 23
keys
 Windows 3

L

labels
 Bluetooth 7
 Microsoft Certificate of Authenticity 7
 regulatory 7
 serial number 7
 service 7
 wireless certification 7
 WLAN 7
left-side components 5
lights
 AC adapter 6

- mute 3
- power 5
- webcam 4

M

- memory card reader 5
- memory, product description 1
- microphone
 - location 3
 - product description 1
- microphone jack 5
- model name 1
- mute light 3

O

- operating system, product
 - description 2
- optical drive
 - product description 1
 - spare part number 14, 15

P

- packaging guidelines 21
- plastic parts, service
 - considerations 19
- ports
 - HDMI 5
 - product description 2
 - USB 2.0 5, 6
- power button 3
- power button board
 - removal 28
 - spare part number 10, 16, 28
- power connector 6
- power connector cable
 - removal 50
 - spare part number 11, 18, 50
- power cord
 - set requirements 62
 - spare part numbers 15
- power light 5
- power requirements, product
 - description 2
- processor, product description 1
- product description
 - audio 1
 - chipset 1
 - display panel 1
 - external media cards 2
 - graphics 1
 - hard drive 1

- memory 1
- microphone 1
- operating system 2
- optical drive 1
- ports 2
- power requirements 2
- processors 1
- product name 1
- security 2
- serviceability 2
- video 1
- wireless 1

- product name 1
- product name and number,
 - computer 7

R

- rear components 6
- regulatory information
 - regulatory label 7
 - wireless certification labels 7
- removal/replacement
 - procedures 23
- right-side components 6
- Rubber Feet Kit, spare part number 14
- Rubber Kit, spare part number 11, 16

S

- Screw Kit, spare part number 14, 16
- security cable slot 5
- security, product description 2
- serial number, computer 7
- service considerations
 - cables 19
 - connectors 19
 - plastic parts 19
- service labels, locating 7
- serviceability, product description 2
- SIM slot, identifying 6
- speakers
 - location 6
 - removal 35
 - spare part number 11, 16, 35
- specifications
 - display 55
- system board
 - removal 38
 - spare part numbers 16, 38

T

- tools required 19
- TouchPad
 - removal 27
 - spare part number 9, 16, 18, 27
- TouchPad zone 3
- transporting guidelines 21
- traveling with the computer 7

U

- USB 2.0 port 6
- USB 3.0 port 5
- USB/card reader board
 - removal 34
 - spare part number 11, 16, 34

V

- video, product description 1

W

- webcam light 4
- webcam, location 4
- webcam/microphone module
 - removal 41, 47
 - spare part number 12, 13, 18, 42, 48
- Windows key 3
- wireless antenna
 - location 3
 - removal 44, 49
 - spare part number 12, 14, 15, 45, 49
- wireless certification label 7
- wireless, product description 1
- WLAN device 7
- WLAN label 7
- WLAN module
 - removal 29
 - spare part numbers 10, 15, 29
- workstation guidelines 21
- WWAN module
 - removal 31
 - spare part numbers 11, 31